

HYPER SCANTM

CONTROLLER



CONSUMER INFORMATION

 
 
 
Need Assistance? In the US and Canada,
service.mattel.com or
1-800-524-8697, M-F 8AM – 6PM, ET.

K4429-0920
© 2006 Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A.
All Rights Reserved.
Printed in China

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

Do not plug / unplug your controller from the console while power is on.

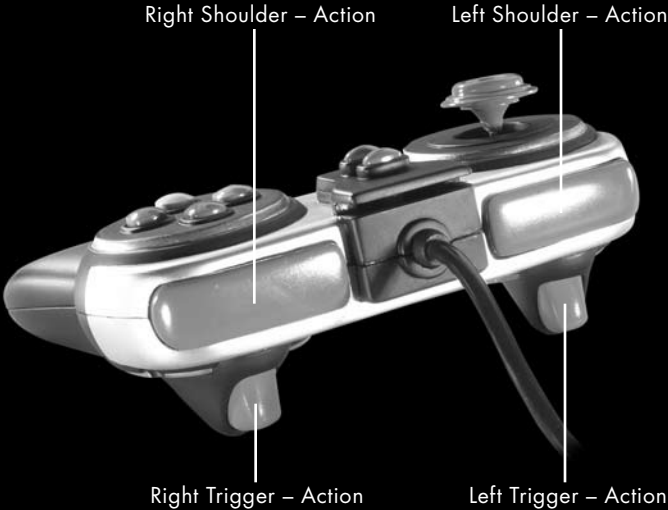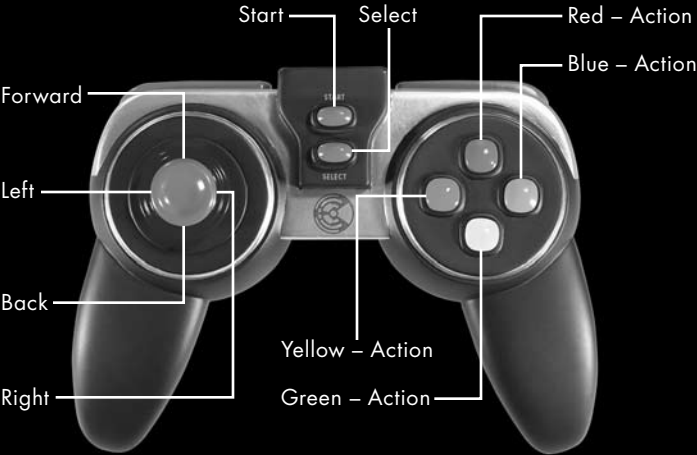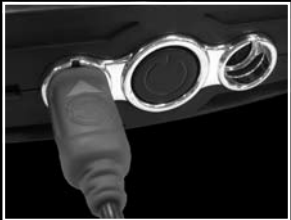

For use with **HYPERSCAN™** Game System only
Check us out online at www.hyperscangamer.com.

TO: LEE ANN WONG, MKTG.
JONATHAN BRADBURY
BOB CREIGHTON
JEFF OSNATA ,PRODUCT DESIGN
KEVIN MCCARRON, LEGAL 5/29/06
CYNTHIA SHULTZ, CPI
FROM: JAN HEININGER, Ext. 4907
TOY NAME: HYPER SCAN- Controller
LANG: DOMESTIC
STATUS: **Copy**
TOY NO. K4429
DATE: 6/1/06

=====

K4429

Part #: (instructions) -0920

**(CONTROLLER INSTRUCTION SHEET THAT WILL BE PACKED OUT INSIDE
THE CONTROLLER PACKAGE)**

(LOGO)
HYPERSCAN™

CONTROLLER

INSTRUCTIONS

Keep these instructions for future reference as they contain important
information.

Do not plug/unplug your controller from the console while power is on.

Plug Controller(s) into the Hyper Scan™ console, as shown.

**(This will require a photo/illustration to correctly orientate the plug to the
console.)**

(Illustration of controller with lines indicating appropriate buttons)

(center buttons)

Start
Select

(joy stick)

Forward
Back
Left
Right

(colored buttons)

Red – Action (top button)
Blue – Action (right button)
Yellow – Action (left button)
Green – Action (bottom button)

Right Shoulder – Action
Left Shoulder – Action

Right Trigger – Action
Left Trigger – Action

For use with HYPERSCAN™ Game System only
Check us out online at www.hyperscangamer.com.

(part number)
-0920

© 2006 Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A.
All Rights Reserved.
Printed in China